


MODEL W1S4840

THIS TOOL EQUIPPED WITH
A RESTRICTIVE TRIGGER

SPOTNAILS
DIVISION OF PEACE INDUSTRIES, LTD.
1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

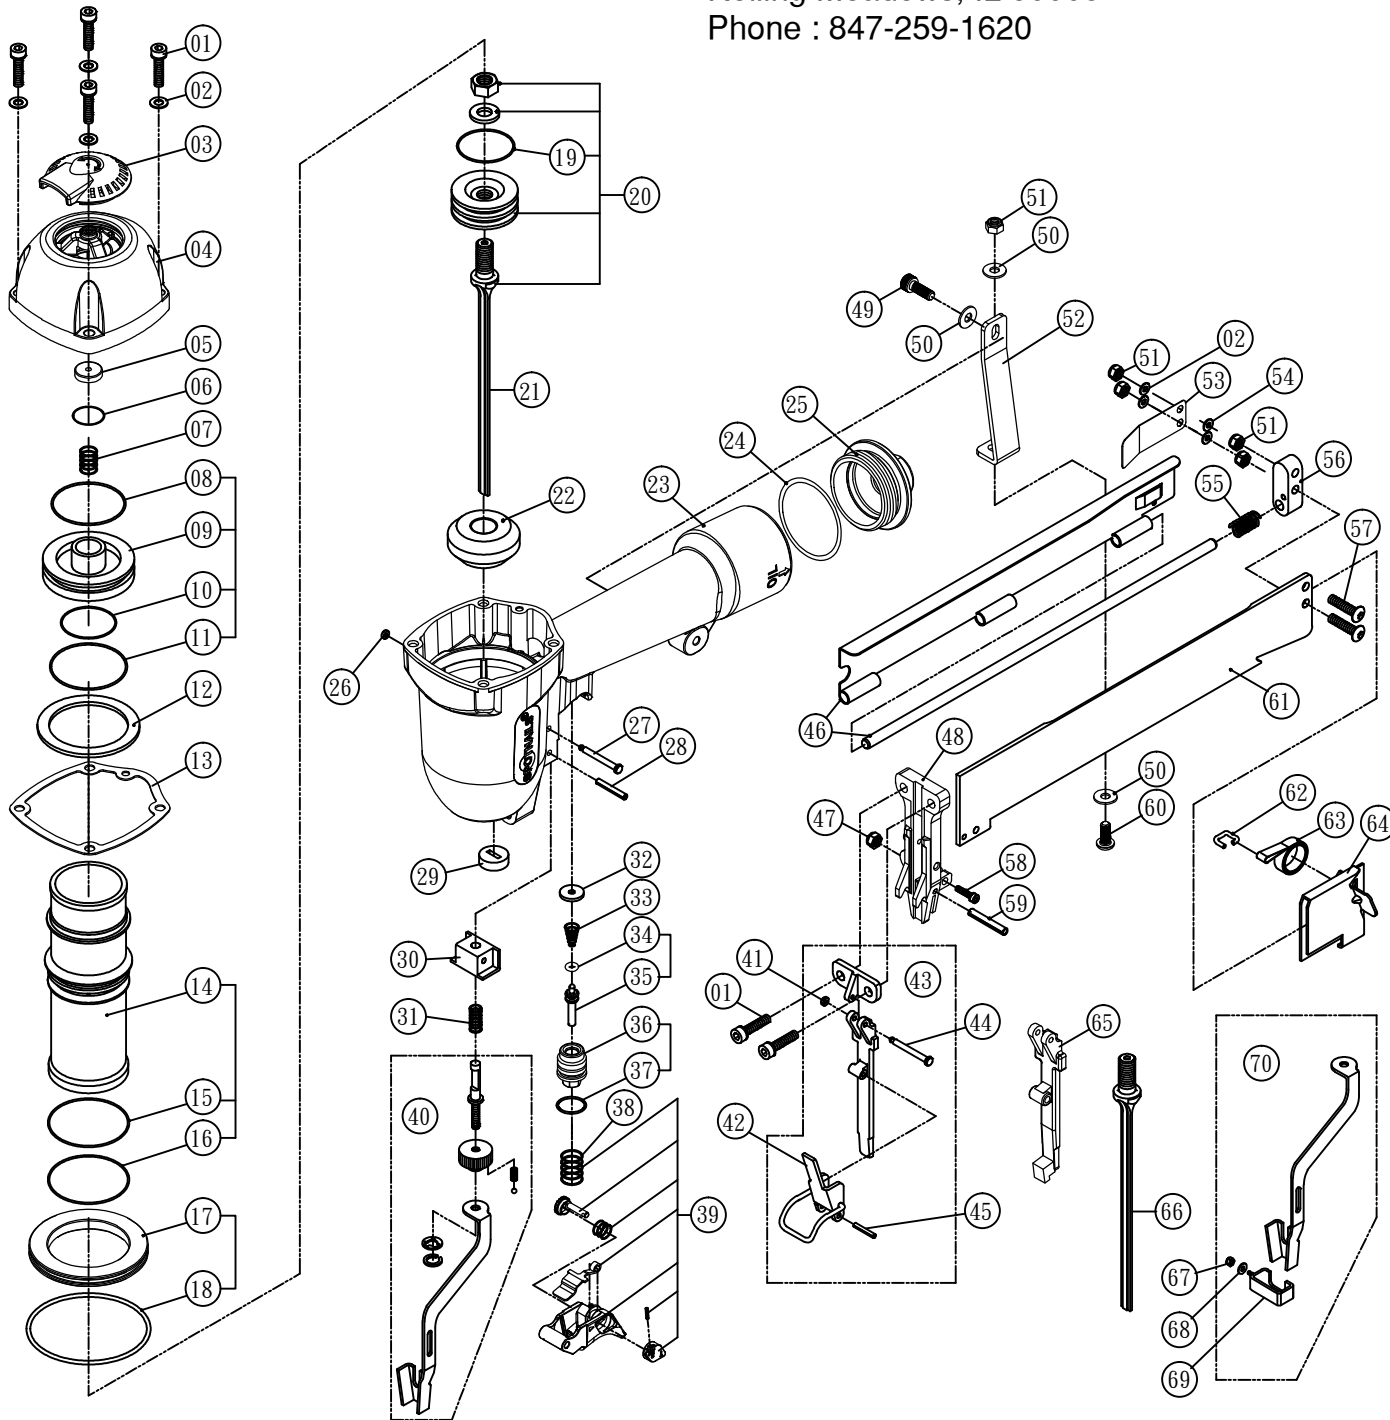

SPOTNAILS MODEL W1S4840

Ref No.	Part No.	Description	Ref No.	Part No.	Description
01	P-24358	Cap Screw-6	36	P-22166	Valve Housing
02	P-32211	Flat Washer-4	37	P-64391	O-Ring
03	P-70062	Exhaust Deflector	38	P-18267	Spring
04	P-60227	Cap	39	AS-21039	Selectable Trigger (Blue)
◆ 05	P-15193	Exhaust Seal	40	AS-53095	Safety
◆ 06	P-64384	O-Ring	41	P-64434	O-Ring
07	P-18331	Poppet Spring	42	AS-04035	Latch Assembly
◆ 08	P-64385	Poppet O-Ring	43	AS-10045	Front Plate Assembly
09	P-63038	Poppet	44	P-07356	Step Pin
◆ 10	P-64233	Piston Stop O-Ring	45	P-07352	Roll Pin
◆ 11	P-64386	Cylinder Seal O-Ring	46	AS-99078	Magazine Cover Assembly
12	P-03070	Guide Spacer	47	P-26125	Nut
◆ 13	P-62097	Gasket	48	P-08465	Wear Plate
14	P-05135	Cylinder	49	P-24312	Screw
◆ 15	P-64387	Cylinder O-Ring	50	P-32170	Washer-3
◆ 16	P-64242	O-Ring	51	P-26126	Nut-5
17	P-05136	Cylinder Guide	52	P-13140	Bracket
◆ 18	P-64633	Cylinder Guide O-Ring	53	P-18488	Spring
◆ 19	P-64388	Piston O-Ring	54	P-32245	Spacer-2
20	AS-06126	Piston & Driver Assembly	55	P-18493	Spring
21	P-06307	Driver Blade	56	P-05098	Fixed Spacer
22	P-15195	Bumper	57	P-24522	Screw-2
23	P-01313	Body	58	P-24311	Screw
24	P-64389	O-Ring	59	P-07290	Roll Pin
25	P-60175	End Cap	60	P-24310	Screw
◆ 26	P-64240	O-Ring	61	P-12405	Track
27	P-07327	Trigger Pin	62	P-18233	Spring Clip
28	P-07262	Pin	63	P-18232	Negator Spring
29	P-15196	Return Seal	64	P-09149	Pusher
30	P-53165	Safety Guide	65	AS-99080	Positive Place Attachment(Optional)
31	P-18328	Spring	66	P-06302	Driver Blade 110.3mm(Optional)
32	P-15194	Valve Seal	67	P-26165	Nut(Optional)
33	P-18283	Spring	68	P-32227	Washer(Optional)
◆ 34	P-64390	O-Ring	69	P-96140	No Mar Safety Tip(Optional)
35	P-22232	Plunger	70	AS-53068	No Mar Safety(Optional)

◆ Parts Included In AS-97493 O-Ring And Seal Kit