


MODEL X1S3640

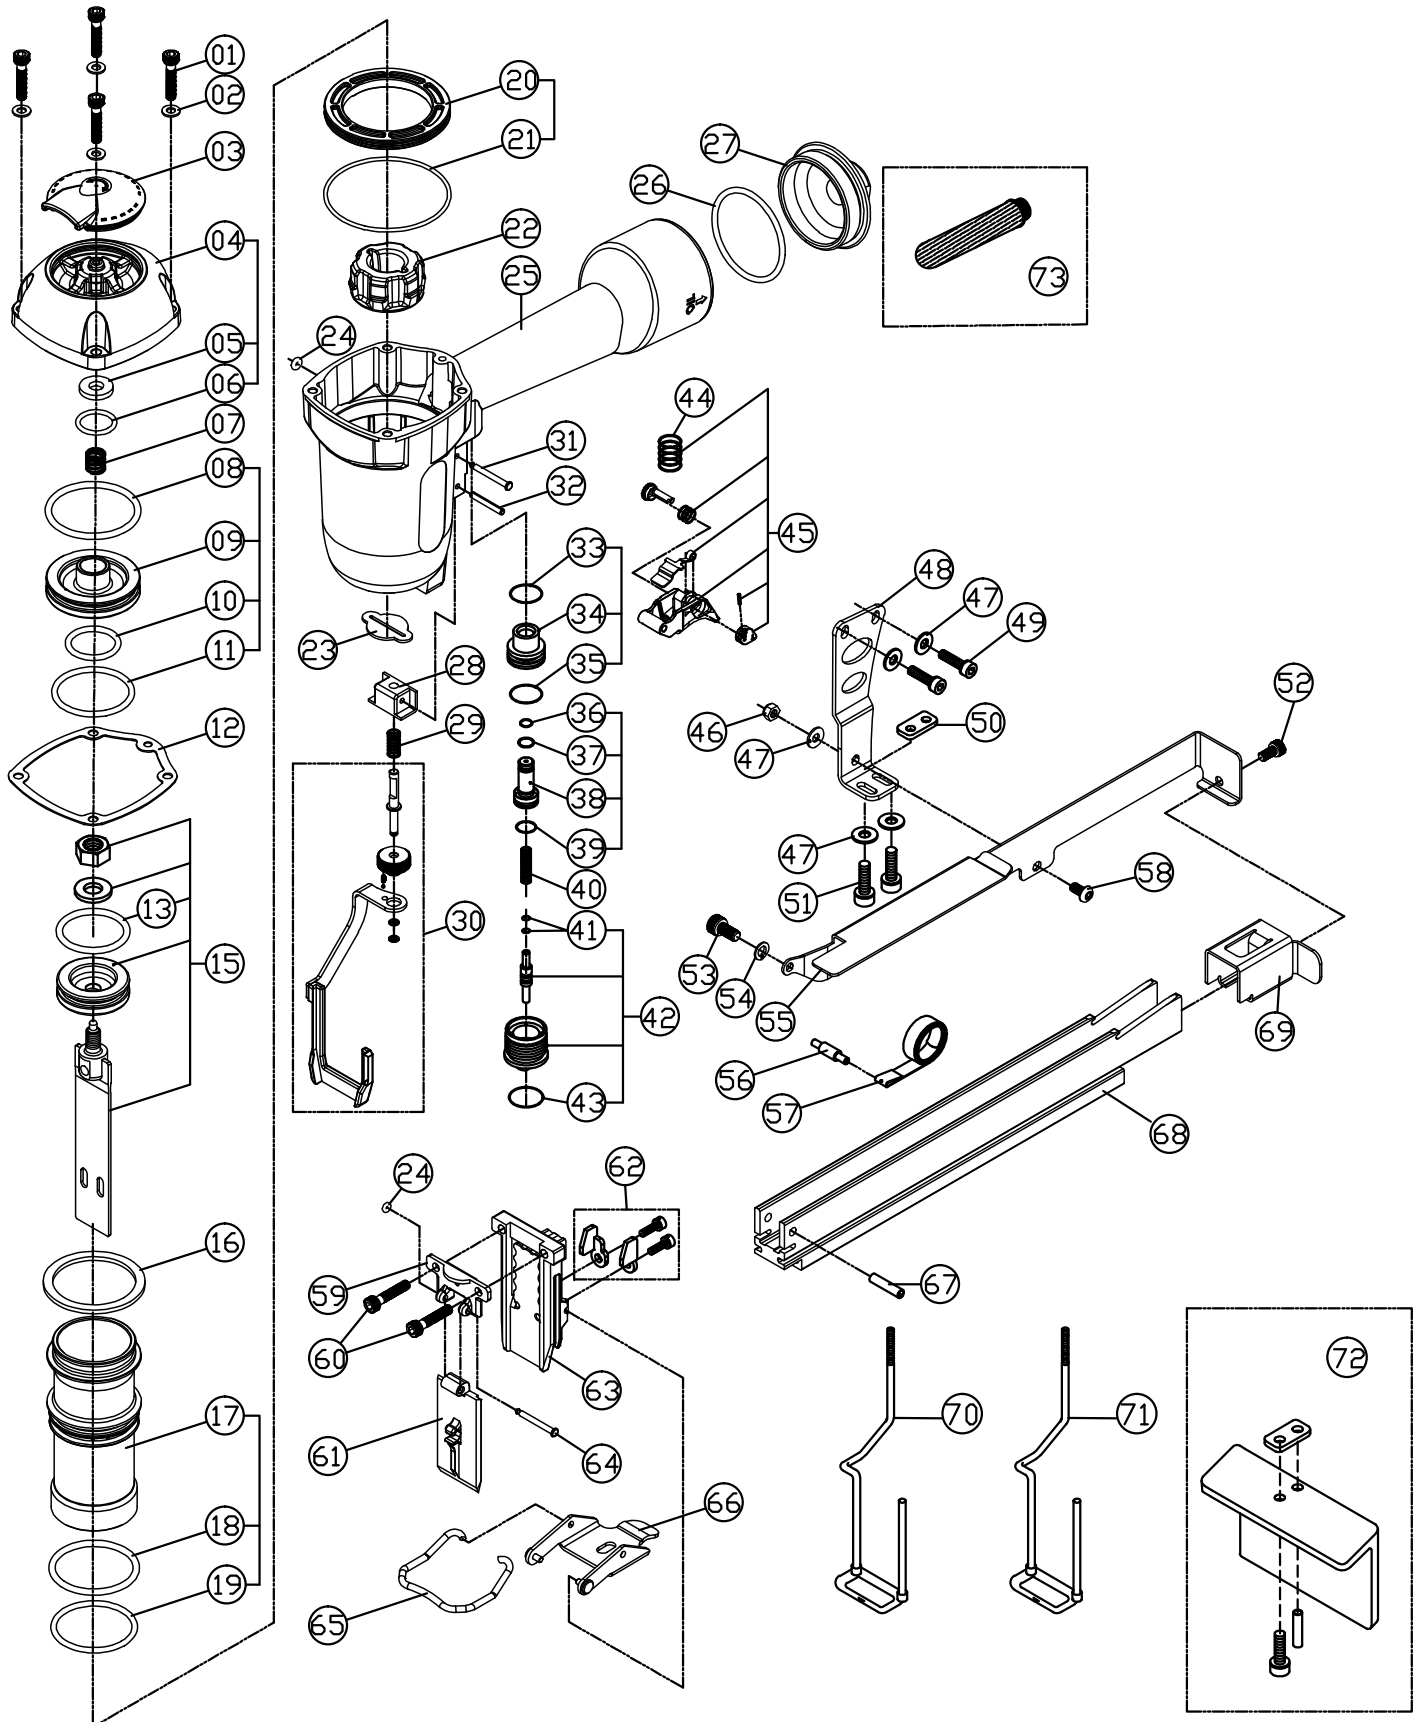

SPOTNAILS MODEL X1S3640

Ref No.	Part No.	Description	Ref No.	Part No.	Description	
01	P-24300	Cap Screw-4	38	P-22145	Pilot Valve	
02	P-32211	Flat Washer-4	39	P-64336	O-Ring	
03	P-70058	Exhaust Deflector	40	P-18227	Spring	
04	P-60221	Cap	41	P-64383	Plunger O-Rings-2	
◆	05	P-15187	Exhaust Seal	42	AS-22037	Plunger Assembly
◆	06	P-64378	O-Ring	43	P-64328	O-Ring
07	P-18327	Poppet Spring	44	P-18267	Spring	
◆	08	P-64601	Poppet O-Ring	45	AS-21031	Trigger Assembly (Blue)
09	P-63055	Poppet	46	P-26126	Nut	
◆	10	P-64379	Piston Stop o-Ring	47	P-32170	Washer-5
◆	11	P-64602	Cylinder Seal O-Ring	48	P-13128	Bracket
◆	12	P-62094	Gasket	49	P-24301	Screw-2
◆	13	P-64617	Piston O-Ring	50	P-26159	Nut Plate
15	AS-06115	Piston & Driver Assembly	51	P-24308	Screw-2	
16	P-03125	Guide Spacer	52	P-24430	Screw	
17	P-05131	Cylinder	53	P-24317	Screw	
◆	18	P-64603	Cylinder O-Ring	54	P-32229	Washer
◆	19	P-64604	O-Ring	55	P-12417	Magazine Cover
20	P-03126	Cylinder Guide	56	P-07335	Negator Spring Pin	
◆	21	P-64605	O-Ring	57	P-18334	Negator Spring
22	P-15278	Bumper	58	P-24434	Screw	
23	P-15203	Return Seal	59	P-10285	Stationary Front Plate	
◆	24	P-64240	O-Ring-2	60	P-24358	Screw-2
25	P-01308	Body	61	P-10289	Removable Front Plate	
26	P-64312	O-Ring	62	AS-99088	Wear Plate Filler	
27	P-60156	End Cap	63	P-08521	Wear Plate	
28	P-53165	Safety Guide	64	P-07357	Pin	
29	P-18328	Spring	65	P-18333	Latch Spring	
30	AS-53087	Safety Assembly	66	P-04062	Quick Clear Latch	
31	P-07327	Trigger Pin	67	P-07334	Pin	
32	P-07262	Pin	68	P-12416	Magazine	
◆	33	P-64332	Valve Housing O-Ring	69	P-09213	Pusher
34	P-22144	Trigger Valve Cap	70	AS-53085	Lathing Safety (Optional)	
◆	35	P-64333	O-Ring	71	AS-53086	Roofing Safety (Optional)
◆	36	P-64334	O-Ring	72	AS-97296	Shingle Guide Assy. (Optional)
◆	37	P-64335	O-Ring	73	P-97454	Filter (Optional)

◆ Parts Included In AS- 97403 O-Ring And Seal Kit