


Distributed by:

Best Materials LLC

Phone: **800-474-7570, 602.272.8128**

Email: **sales@bestmaterials.com**

Website: **www.bestmaterials.com**

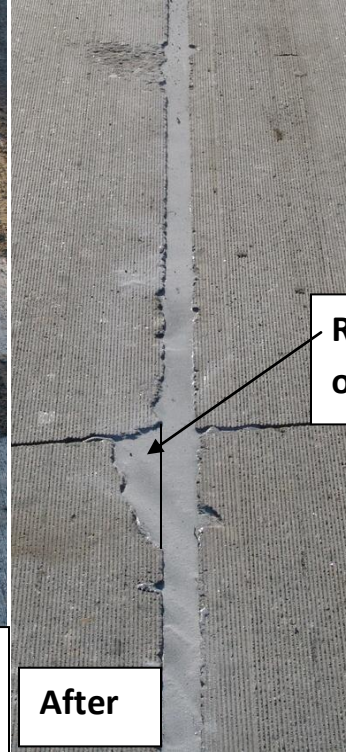

1. Clean area to be filled with joint sealant.
2. Sandblast if possible and then vacuum or blow out debris and dust.
3. Prime both sides of joint with Polyprime.
4. Wait 15 minutes and then install an oversized backer rod so that it fits into the joint under compression. For example: for a 1" wide joint, install 1 ¼" backer rod. Place ½" down into the joint of the joint is 1" wide to create a 2:1 width:depth ratio configuration.
5. Install EJC25. Allow a minimum of 30 minutes to cure @70f and then sand the surface if required.

Distributed by **Best Materials LLC**

For more information call:

800.474.7570, 602.272.8128

Website: <http://www.bestmaterials.com> ✉ E-mail: sales@bestmaterials.com