

J-DRain® SWD




Landscape Drainage Composites

Distributed by: BEST MATERIALS®
Ph: 800-474-7570, 602-272-8128
www.BestMaterials.com
Email: Sales@BestMaterials.com

Installation Instructions:

1 Determine Drainage Layout:

Locate area that requires drainage and slope to determine direction of drainage system to daylight.

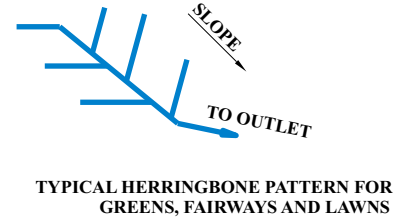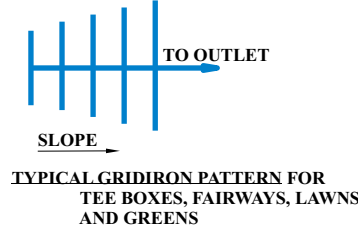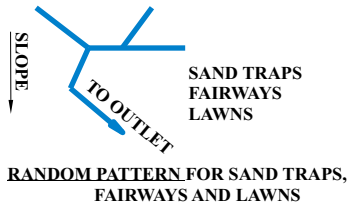

2 Mark and Excavate Trenches:

Locate and mark all utility lines. Using this as consideration, mark field or drainage area with a chalk line at trench locations. Excavate trenches 2" - 3" (33 - 105 mm.) wide and to a depth so that the top of the **J-DRain SWD** is 6" below the turf surface.




3 Install into Trench:

Unroll and place **J-DRain SWD** vertically into trench. Center with temporary wood stakes.



4 Install Fittings:

Install proper fittings and tape fittings in place with duct tape to ensure solid connection to drain.

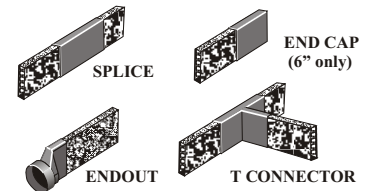

5 Connect to Pipe:

Connect **J-DRain SWD** with Endout fitting to 4" pipe to take water to daylight. Tape.




6 Backfill:

Pour select backfill such as washed concrete sand.



7 Top off and replace sod:

Remove temporary stakes and flood trench with water to promote proper compaction. Top off trench with sand and replace sod.

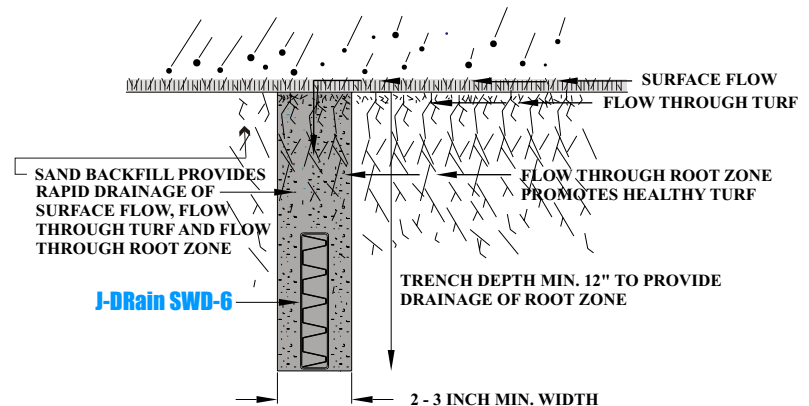

Cross Section Diagram