

Fastener Patterns

SECUROCK[®] High-Performance Roof Boards

Proper fastener spacing is critical to achieve wind-uplift performance. Always use fasteners specified in accordance with Factory Mutual Global (FMG) requirements and the roof membrane manufacturer's written recommendations. Fasteners should be installed in compliance with the roof manufacturer's installation recommendations and FMG Loss Prevention Data Sheet 1-29.

4' x 4'
Roof Board


4 Fasteners	5 Fasteners	6 Fasteners
8 Fasteners	9 Fasteners	11 Fasteners
12 Fasteners	14 Fasteners	16 Fasteners




Fastener Patterns

4' x 8'
Roof Board


8 Fasteners

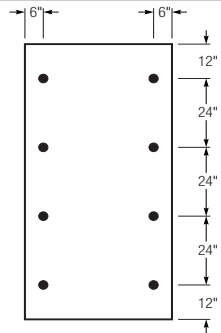


10 Fasteners

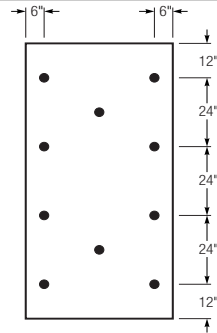


12 Fasteners

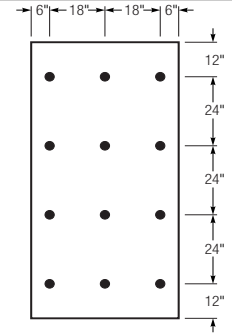


15 Fasteners

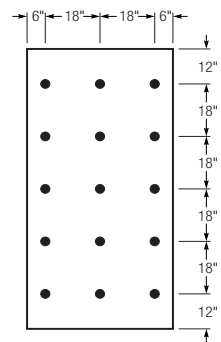


16 Fasteners

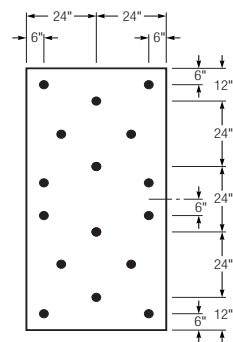

24 Fasteners

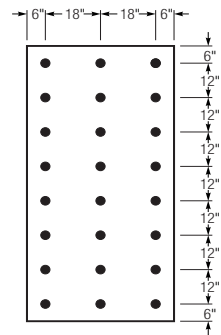

32 Fasteners

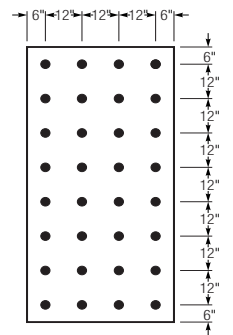

800.USG.4YOU (874-4968)
usg.com

RF41/9-11
© 2011 United States Gypsum Company
Printed in U.S.A.