

Universal Strainer Dome

INSTALLATION PROCEDURE

FOR USE WITH

Existing drains with broken or missing strainers.

JOB PREPARATION

Remove existing broken strainer if applicable.

STEP 1 Attach the two tension arms to the underside of the Universal Strainer Dome. Place the threaded studs on the top of each tension arm through the two 5-in. slots provided. **Note:** The side of each tension arm stamped "outside" should face the wall of the drain leader pipe.

STEP 2 Install the washers and wing nuts over two studs and loosely tighten.

STEP 3 Pull the lower ends of the two tension arms inward and insert the arms into the drain leader. Lower the Universal Strainer Dome onto the roof surface. **See reverse side for Vandal Resistant Models.**

STEP 4 The space between the two threaded studs should be approximately one inch greater than the inside diameter of the leader pipe. **Example:** Leader Pipe ID = 4-in. spacing between the two tension arms = 5-in. Tighten snugly.

For technical assistance contact OMG at 800-633-3800.

VANDAL RESISTANT INSTRUCTIONS

STEP 1 Lubricate two existing clamping ring nuts and bolts directly opposite from one another. Carefully remove the two nuts and set aside for reuse.

STEP 2 Place the Universal Strainer Dome over the drain bowl and center the strainer with the drain leader opening.



STEP 3 Measure the height from the top surface of the clamping ring to the underside of the top of the Universal Strainer Dome by inserting a tape measure through one of the drainage slots.

STEP 4 Adjust the two nuts on the strainer securement brackets to the appropriate height using a $\frac{7}{16}$ " wrench. Overall bracket length should equal to the distance between the top of clamping ring and the underside of the Universal Strainer Dome.

STEP 5 Place the brackets over the two studs and install the two stainless steel washers over the studs.

STEP 6 Install the two clamping ring nuts (removed earlier) over the washers and tighten to secure two brackets.

STEP 7 Place the Universal Strainer Dome over the drain bowl and align the two 5" long slots over the two securement brackets. Install the two washers and bolts provided and then tighten hardware with the Allen wrench provided.

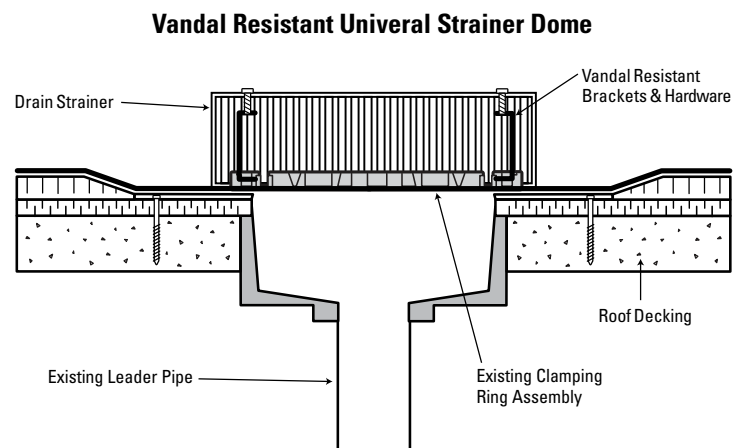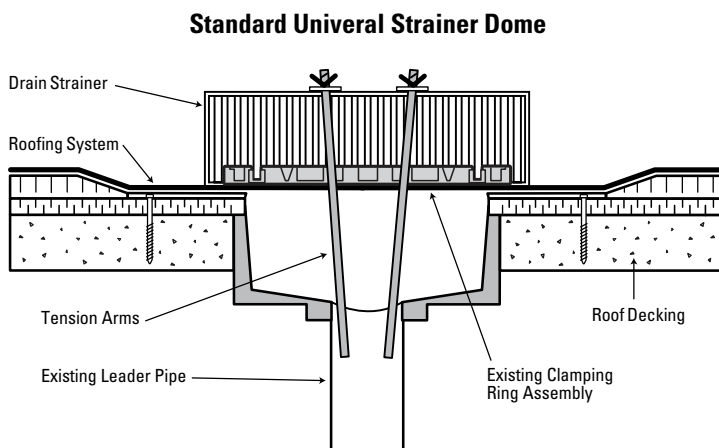

ROOFING PRODUCTS

153 BOWLES ROAD, AGAWAM, MA 01001
800-633-3800 WWW.OLYFAST.COM INFO@OLYFAST.COM

SuperDome® and OlyFlow® are trademarks of OMG, Inc. Copyright © 2011 OMG, Inc. All rights reserved.