


Installation Instructions

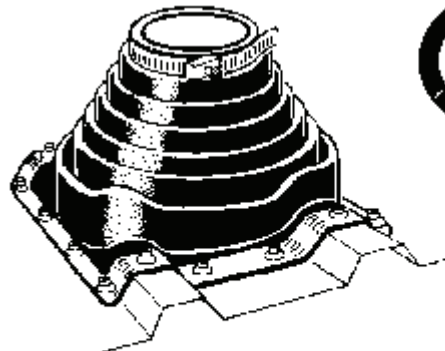

STEP 1

Select sizing . When opening is at bottom of boot size - Go to next smaller size boot.




STEP 2

SELECT AND TRIM ... Choose appropriate Deck-Mate with opening at least 20% smaller than pipe diameter. If necessary trim opening to 20% smaller than pipe diameter.



STEP 3

Slide Deck-Mate down over pipe (A non-petroleum based lubricant will ease installation).

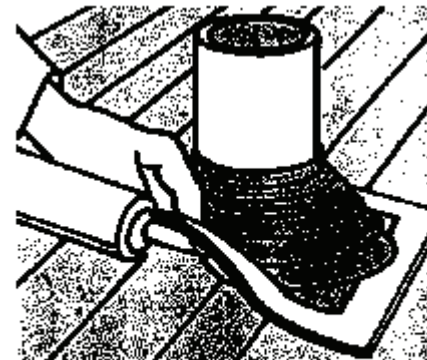

STEP 4

Apply sealant between base and roof membrane.

Distributed by: [BEST MATERIALS ® LLC](#)


Ph:800-474-7570, 602-272-8128 Fax: 602-272-8014

www.BestMaterials.com Email: Sales@BestMaterials.com



STEP 5

Press Deck-Mate down, bending it to conform to roof profile or roof irregularities. A blunt tool will help press flashing into tight roof angles.

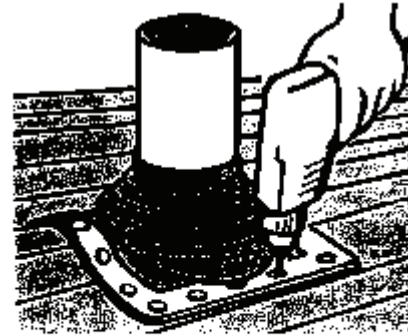

STEP 6

Use fasteners to complete sealing. For UPC installation, fastener spacing may not exceed 1.5" (38mm). Tighten stainless clamp at penetration.

All information is subject to change without notice. Dimensions and specifications shown are within manufacturing tolerances.
© Copyright Commercial Products Group of Hart & Cooley, Inc., January, 2008. All Rights Reserved.

Distributed by: **BEST MATERIALS ® LLC**
Ph: 800-474-7570, 602-272-8128 Fax: 602-272-8014
www.BestMaterials.com Email: Sales@BestMaterials.com