


Installation Instructions for Aura Vent, Aura Solar Fan & Pop Vent Retro-Fit Products



Remove the old turbine "head" off the collar. Leave the collar attached to the turbine base on the roof.

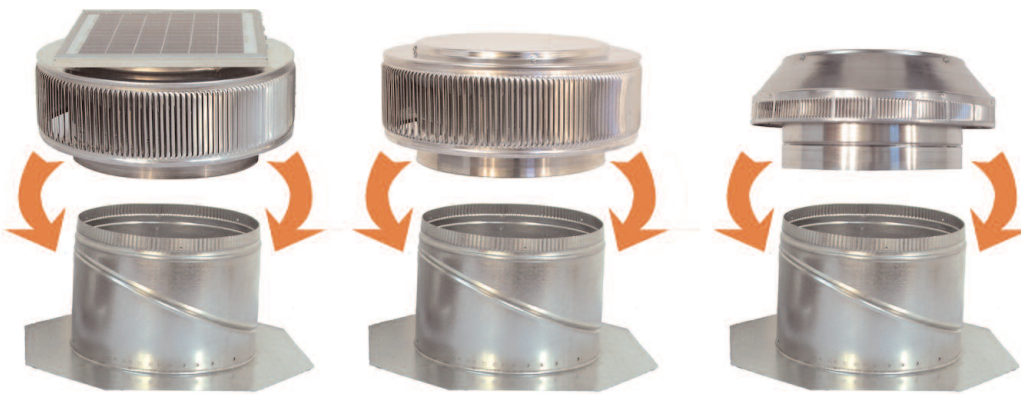

Now slide your replacement head over the existing collar

Lastly use the four #8 self-taping screws (included in the box) to attach the vent heads. Screws should be placed at 12:00, 3:00, 6:00, 9:00.

