

# Vulcan Vent<sup>®</sup>

## Foundation Exterior Retrofit – Wood Siding (VF414FF, VF614FF, VF814FF) Installation Instructions.

After removing the old vent, you will need the following tools & supplies:


- Screw gun w/ tip for your screw type or hammer (if using nails)
- 4) 1" to 1.5" Wood Grip Screws, or Nails

- 1) **Remove old vent.** Depending on how old vent was installed you may need a hammer and cat's-paw or crowbar OR a drill gun with the appropriate tip.



- 2) **Install new vent:** Fit the new vent into the opening and secure it with nails or screws.

Optional: Depending on weather conditions, overhangs and building codes in your area, it may be necessary to use a clear silicone caulk along the edge of the vent, once it is securely fastened in place.

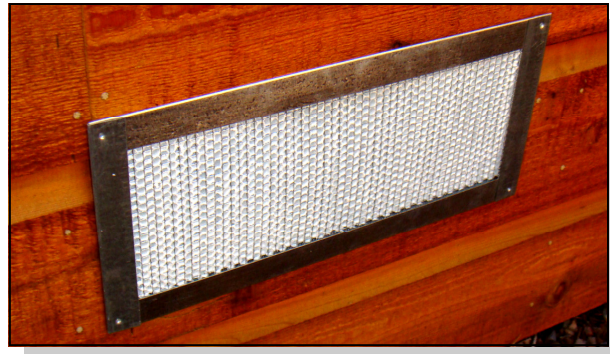

This entire process should only take a few minutes to complete depending on existing conditions. If any questions arise regarding the installation process, please call Gunter Mfg. at 916-652-7424.

**\*Important:** When painting or staining the exterior remember to mask off the face of the vent to prevent excess spray from sticking to the mesh. Also, It is a good idea to routinely check all of your homes vents (Vulcan Vent or otherwise) once a year to make sure they are clean and clear of debris and that they are not blocked by plants or vines.



[www.guntermfg.com](http://www.guntermfg.com)