





The New Leader in the Vapor Barrier Industry



Penetrations

Penetrations: All penetrations must be sealed. Inspect the area and determine if the space around the pipe is Small or Large. A Small space can be sealed with the Xtreme Tape. A Larger space it will need to be sealed with an Xtreme Patch. Please see below for details.

1. Small or minimum space around pipe: Place the Xtreme Tape around the pipe, insuring the tape has covered the pipe and is attached to the Xtreme Vapor Barrier more than adequately. (See figure 1A, 1B)

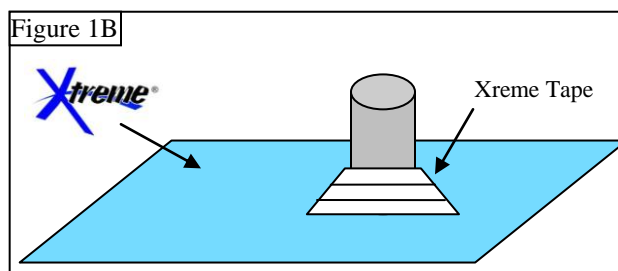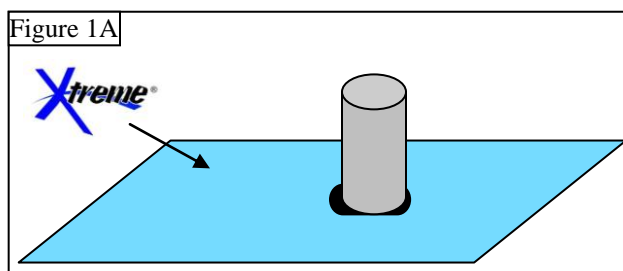

2. Larger spaces around pipe: Cut a piece of Xtreme in a shape, larger than the repair, insuring a minimum six inch overlap in all directions and tape all of the edges. Cut an X the size of the pipe or slightly smaller for a snug fit and slide the patch over the pipe and seal the pipe with the Xtreme Tape. (See figure 2A, 2B)

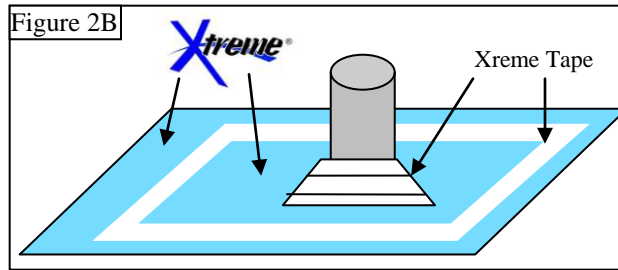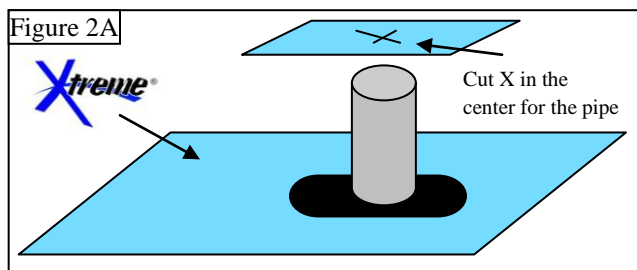

Note: For maximum adhesion of the tape, apply the Xtreme Tape immediately after the Tex-Trude Xtreme Vapor Barrier Patch has been placed. The area should be free from dirt, dust, and moisture.



Tex-Trude, LP. . P.O. Box 58 . Channelview, TX . 77530



9001-2008
CERTIFIED

Distributed by:

Best Materials LLC

Phone: **800-474-7570, 602.272.8128**

Email: sales@bestmaterials.com

Website: www.bestmaterials.com