



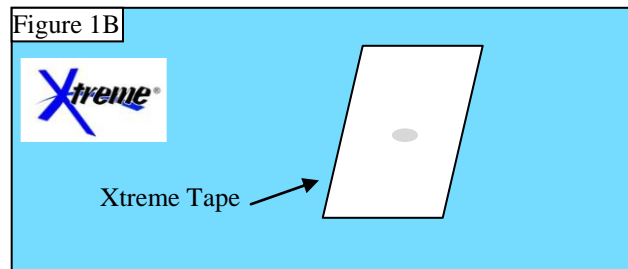




The New Leader in the Vapor Barrier Industry

Repairs

1. Small Repairs – Xtreme Tape can be used over the hole to repair the area. A small repairs would be defined as anything that has damaged the barrier the size of a small hole. A small hole can range from a pin hole and not to exceed 3/8” diameter. (See figure 1A & 1B)

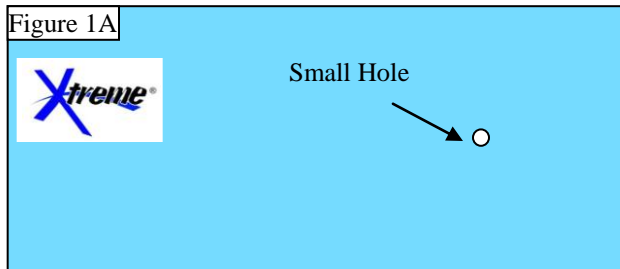

2. Larger Repairs –Cut a piece of Xtreme in a shape, larger than the repair, insuring a minimum six inch overlap in all directions and tape all of the edges. (See figures 2A, 2B, 2C)

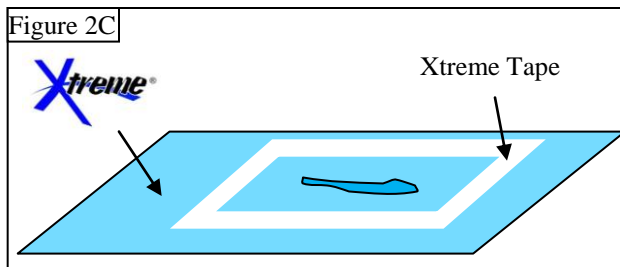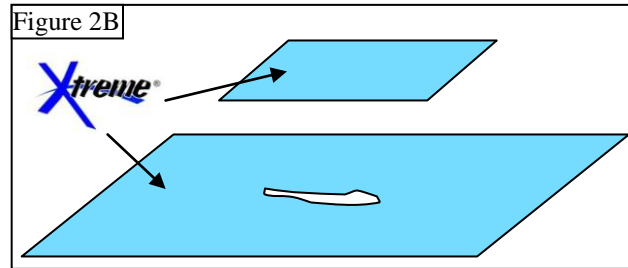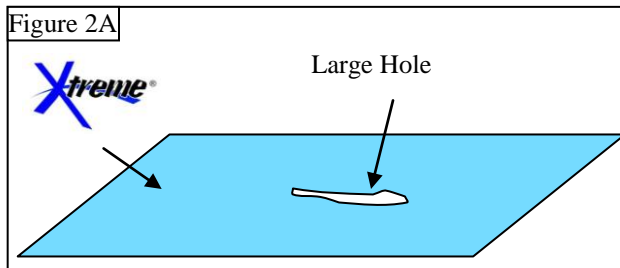

Note: For maximum adhesion of the tape, apply the Xtreme Tape immediately after the reapiar has been placed. The area should be free from dirt, dust, and moisture.



Tex-Trude, LP. . P.O. Box 58 . Channelview, TX . 77530



9001-2008
CERTIFIED

Distributed by:

Best Materials LLC

Phone: **800-474-7570, 602.272.8128**

Email: **sales@bestmaterials.com**

Website: **www.bestmaterials.com**